


Compact Dome. Limitless Potential!

MOBOTIX D71 – Dome



- ✓ **Finely crafted and convenient:** can be manually adjusted on three axes
- ✓ **Flexible thanks to a range of lenses** with a viewing angle of between 15° and 95°
- ✓ **Automatic day/night switching**
- ✓ **Robust** with weather-resistant aluminum housing for indoor and outdoor use
- ✓ **Audio function** for direct communication
- ✓ **Open to enable intelligent video analysis** with camera apps
- ✓ **Made in Germany** for optimum cybersecurity

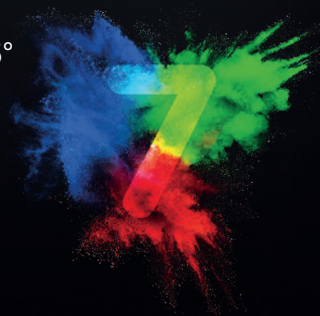

Learn more now
www.mobotix.com

MOBOTIX
BeyondHumanVision



IK10 4K UHD

IP66 4MP

8GB SD ONVIF Day/Night

Speaker H.264 30fps@4k

Apps IR Micro H.265 WDR

D71 Dome – A Proven Classic with New Class

Discreet appearance and abundant in options: This is the MOBOTIX D71 Dome. The compact single-lens camera is protected by a weather and impact resistant dome. Three manually adjustable axes allow you to **perfectly orient** the configurable optics **in a very convenient way**. The D71 becomes **infinitely flexible** with the intelligent video analysis apps onboard the MOBOTIX 7 platform. These apps can be programmed individually. Everything is possible. Everything can be done under the D71 Dome!

Precise and Finely Crafted – Movable in Three Axes

The D71 can be **precisely oriented** to local conditions via three manually adjustable axes (right-left rotation, pan-tilt rotation and image rotation). While these mechanisms are used for the basic orientation of the system, you can use manual rotation to handle special requirements. This lets you manually change the image format from 16:9 widescreen to 9:16 portrait for use in a long corridor, allowing for **optimal surveillance** due to better coverage of the surveillance area.



Superior Image Quality, Day and Night

The compact D71 can be fitted with all optical **4K** and **4MP** day/night lenses with a **viewing angle of 15 to 95°**. The wide range of lenses, including the light-sensitive **UltraLowLight** sensors, ensure **brilliant image quality**. The integrated IR lighting can be customized to wide, standard or tele lenses to ensure optimal lighting at all times.



MOBOTIX 7 – Video analysis Has Never Been So Comprehensive!

The D71 is part of the **MOBOTIX 7 platform** with its intelligent video analysis apps. A large number of existing Certified Apps already cover numerous applications, such as loitering, unattended baggage or facial recognition. You can also develop and implement your own camera apps. This is how new solutions are created time and time again. We will be happy to support you with the programming. **All currently available Certified Apps** are pre-installed and can be tried **free of charge for 30 days!**



Effective and Budget-Friendly for Many Industries

- Retail: Theft protection and cash register surveillance with discrete system, connection to the cash register system possible
- Hotels and public buildings: surveillance of corridors (e.g. unattended baggage)
- Hospitals: documentation and control of access to restricted areas (e.g. medicine storage facility, operating theater)
- Protecting perimeters: targeted protection of facades

EN_11/21
MOBOTIX AG • Kaiserstrasse • 67722 Langmeil • Germany • sales@mobotix.com

MOBOTIX is a registered trademark of MOBOTIX AG in the European Union, the USA, and other countries. This may only be transferred to trade or commercial partners. Subject to change. MOBOTIX does not assume any liability for technical errors, printing errors or omissions. All rights reserved. © MOBOTIX AG 2021

MOBOTIX
BeyondHumanVision