

Giving Shape to Ideas

Inline Digital Foiling Solution

METEOR Unlimited Colors XL+









Hi-def toner. Dry, silicone free toner. Smaller particles. Higher color consistency. **Eco-friendly formula.** Long life toner. Ability to swap on-the-fly without interrupting production.

iFOILT

The iFOIL T station connects in-line with the Meteor XL+, allows you to generate high added value printing.

The final job is delivered with outstanding metallic tones combined with CMYK color overprinting.

High Capacity Stacker

High volume laser guided stacker for output. Stack up to 6,000 sheets of paper or 60 cm/23" height.



Based on the original MGI iFOIL award-winning technology,

the iFOIL T is a breakthrough innovative digital toner foiling solution for the postpress print enhancement market.

MGI Meteor digital presses can be fully integrated with the iFOIL T station to create a Meteor Unlimited Colors® inline printing and foiling solution. Print Service Providers (PSPs) are now able to produce output with a virtually unlimited number of colors via the blending of CMYK toner and the reflective qualities of foil film – including a rainbow spectrum of hues with metallic, glitter and holographic effects.

The Meteor Unlimited Colors system uses a 100% digital production process. This unique integrated printing press and postpress foiling system eliminates the cost and need for die-making, tooling and traditional

makeready setup times and waste. A wide variety of standard market foils – and colors, patterns and designs - can be used to create brilliant (and highly profitable) special effects in a single pass. Since Konica Minolta does not impose click charges on Meteor presses, multiple passes can be cost-effectively used to create truly remarkable toner-over-foil blends of color and light on a diverse range of substrates - including uncoated and coated paper, laminated surfaces, plastics and many other synthetic materials. The system can use up to two different foils in a single pass.







- Embellishment of print jobs with the original foil color with a combination of toner and foil adhesion
- Highlight areas like logos, shapes, texts and lines
- Gold or silver foil to increase the values of print jobs














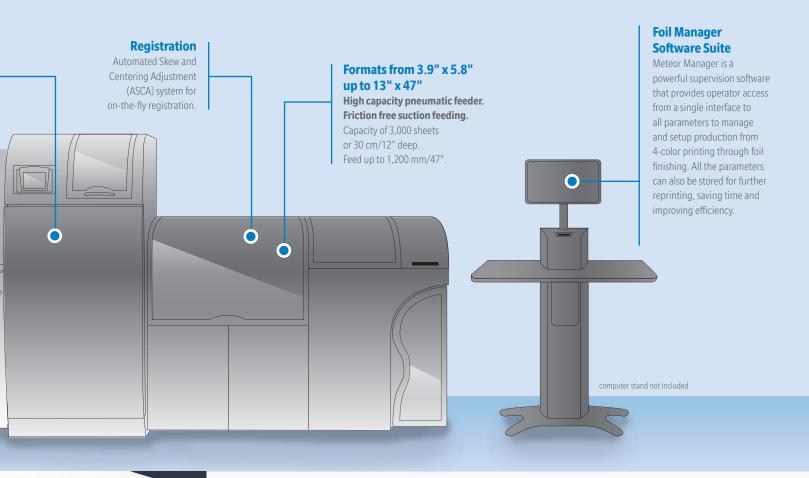



SECOND-PASS TONER

- First-pass foiling can be overprinted with CMYK toner to create unlimited range of metallic colors
- Brilliant light-reflecting qualities of gold and silver foil

...iFoil Technology

The iFOIL T module connects inline with the MGI Meteor Press. This digital enhancement option allows printers to generate lucrative, high-margin output, expand their service portfolios and strengthen their client relationships.

First Pass Foiling

Printing jobs can be embellished with the original foil color via a fusion of toner & foil adhesion to the substrate surface. Application examples include: logos, shapes, text, lines and highlights. The ability to add elements like gold & silver to digitally printed output dramatically increases the value of the material to the customer.

Second Pass Toner

With no click charges involved, printers can also overprint the foil applied during the first pass with another application of CMYK toner to create a limitless kaleidoscope of tints & hues – as well as precise spot coats to match colors generated from other environments. The light-reflecting qualities of metallic foil provide a powerful foundation for expanding the gamut of effects to a virtually unlimited color range.

45, bd Agatha Christie

75666 Crimeville

Foil Over Foil and Authentication Hologram Digital Printing[©] (AHDP) System

AHDP®, a MGI exclusive and patent system, produces on-demand holographic imprints with Meteor Unlimited Colors presses, speciallyformulated toner and foil films. The digital holographic effects offer customized security authentication options at a mere fraction of traditional costs. This powerful anti-counterfeiting method is now economically accessible without the need of expensive dies and lengthy tooling processes. AHDP also works in conjunction with variable data printing (VDP) to create unique document identification







Specifications

Meteor DP8700 XL+			
4-Color Digital Press			
Color Print Speed	Up to 71 ⁽¹⁾ A4 sheets per minute.		
Print Quality and Line	Print resolution up to 3,600 dpi and line screens ranging		
Screens	from 130 to 270 lpi.		
Printable Formats	• Minimum: 100x148 mm – 3.9" x 5.8"		
	 Maximum: 330x1,200 mm – 13" x 47" 		
Supported Substrate	Paper from 65 to 400 gsm (coated and uncoated);		
Thicknesses	 Plastic from 100 to 400 μm (PVC, Teslin®, Vinyl). 		
	 Envelope from 100 to 400 µm with/without window. 		
Paper Input	• 2 Trays		
	1,500 sheets total capacity (500+1,000 sheets).		
	• Bypass		
	250 sheets capacity from 65 up to 300 gsm.		
	Integrated Pneumatic Loader		
	3,000 sheets maximum capacity		
Registration	Precise registration with exclusive Automated Skew and Centering		
	Adjustment (ASCA) system. Comparable to offset, applies to all		
	printed works (front-back, page-page at ±0.5 mm).		
Feeder Table	Feeder table with fully motorized and automatic side lay guide.		
	Auto-adjusts for format width and paper skew.		
	Ultrasonic double sheet detection system.		
Paper Output	High pile motorized stacker for hosting up to 6,000 sheets.		
External Controller	Fiery FS100 Pro.		
Personalization and	100% compatible with market standard software solutions		
Variable Data Printing	(Adobe InDesign, Bartender, Newleaf).		
Electrical Specifications	Feeder: 1 x (230V / 1P + N + E / 32 A)		
	Printer: 1 x (230V / 1P + N + E / 32 A)		
	iFOIL T: 2 x (230V / 1P + N + E / 32A)		
	1 x (230V / 1P + N + E / 16 A)		
	Stacker: 1 x (230V / 1P + N + E / 16 A)		
	Computer & Rip: 3 x (230V / 1P + N + E / 16 A)		
Operating Environment	 Required temperatures: 18° to 30°C (59°F to 86°F) 		
	Optimum between: 20° to 22°C (64° to 73°F)		
	Operating Humidity: 30% to 50% RH		
	Optimal condition: 40%		
Dimensions & Weight	LxWxH: 6.73x1.40x1.81 meters/264"x55"x71"		

2,002 kg/4,413 lbs

iFOIL T			
Digital Foiling Station			
Supported Thicknesses	 Minimum: 80 gsm equals to 80 μm prior to printing and 		
With Foil Without Toner	possible lamination.		
Overprinting	 Maximum: 350 gsm equals to 350 μm prior to printing and 		
	possible lamination.		
Supported Thicknesses	 Minimum: 150 gsm equals to 150 μm prior to printing and 		
With Foil and Toner	possible lamination.		
Overprinting	 Maximum: 350 gsm equals to 350 μm prior to printing and 		
	possible lamination.		
Printing Speed	Up to 50 ⁽¹⁾ A4 sheets per minute		
Paper Formats	 Minimum: 110x220 mm – 4.3" x 8.7" 		
	 Maximum: 330x1,200 mm⁽²⁾ – 13" x 47" 		
Substrates	The Hot Foil process is compatible with most the of substrates		
	supported by the Meteor Digital Press (uncoated or coated paper,		
	textured paper, envelopes, PVC, Teslin, etc.).		
Hot Foils	Utilizes selected hot foils available on the market. Integrated foil		
	consumption system. Popular foil colors are supported such as gold,		
	silver, blue, red, green and black.		
Rolls	Hot foil are delivered on rolls. Standard roll is 320 mm width and		
	305 meters long, using a one inch core. Possibility to use smaller		
	widths such as 100 mm and add them up on the same axis for		
	laying up to 2 simultaneous colors. Option: 3 inch core automatic		
	unwinding.		
Foil Manager	Meteor Manager is a powerful supervision software platform.		
Software Suite	Within a single tool, it gives access to the operator to parameters		
	to manage and setup the production from 4-color printing		
	through foil finishing. All parameters can also be stored for further		
	reprinting, saving time and improving efficiency.		
Electrical Specifications	Feeder: 1 x (230V / 1P + N + E / 32 A)		
·	Printer: 1 x (230V / 1P + N + E / 32 A)		
	iFOIL T: 2 x (230V / 1P + N + E / 32A)		
	1 x (230V / 1P + N + E / 16 A)		
	Stacker: 1 x (230V / 1P + N + E / 16 A)		
	Computer & Rip: 3 x (230V / 1P + N + E / 16 A)		
Operating Environment	Required temperatures:18° to 30°C (59°F to 86°F)		
	Optimum between: 20° to 22°C (64° to 73°F)		
	Operating Humidity: 30% to 50% RH		
	Optimal condition: 40%		
Dimensions & Weight	LxWxH: 6.73x1.40x1.81 meters/264"x55"x71"		
3	2.002 /4.412		

⁽¹⁾ print speed may vary according to the substrate and print parameter used

2,002 kg/4,413 lbs

Partnership.

Konica Minolta can help give shape to your ideas and partner with you to achieve your corporate objectives. Contact us to realize opportunities in:

Information Management	IT Services	Technology
Enterprise Content Management (ECM)	Application Services	Office Multifunction Business Solutions
Document Management	Cloud Services	Commercial and Production Printers
Automated Workflow Solutions	IT Security	3D Printers
Business Process Automation	Managed IT Services	Wide Format Printers
Security and Compliance	IT Consulting & Projects	Laptops, Desktops and Computer Hardware
Mobility		Servers and Networking Equipment
eDiscovery Services		Managed Print Services (MPS)
		Managed Enterprise Services

For complete information on Konica Minolta products and solutions, please visit: CountOnKonicaMinolta.com



KONICA MINOLTA BUSINESS SOLUTIONS U.S.A., INC. 100 Williams Drive, Ramsey, New Jersey 07446

CountOnKonicaMinolta.com







⁽¹⁾ without calibration and stabilization

⁽²⁾ please contact Konica Minolta to check your substrates/toner/foils compatibility

⁽³⁾ duplex technical limitation. Please contact us.